

Contents

24V transformer x1



24V extender lead x1



Illuminated pocket
(size & qty as per kit type)



Hanging cable x2



Floor Fitting (with plastic isolators) x2




Ceiling Fitting (with plastic isolators) x2



power connector x2



1.

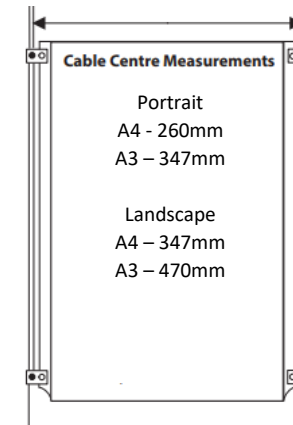




Mark cable centres on the ceiling or window top reveal. These should be at least 50mm from the window pane allow access to load pockets

Plumb centre points to the floor or window sill

2.


Separate the ceiling fittings and uncoil cables. Screw the inner threaded bush to the ceiling using an appropriate fixing. If attaching to a metal substrate use the plastic isolating bush shown in the middle image

Thread cables through the outer barrel and screw these onto the bush

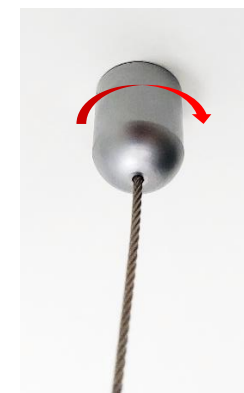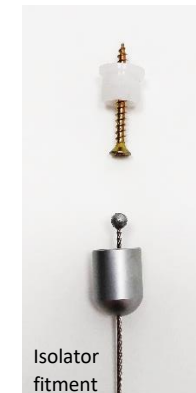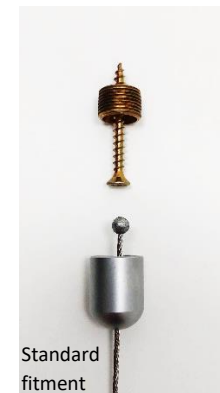


3.

Separate floor fittings, Screw the lower sleeve the floor using an appropriate fixing. If attaching to a metal substrate use the plastic isolating inserts & washers shown in the middle image

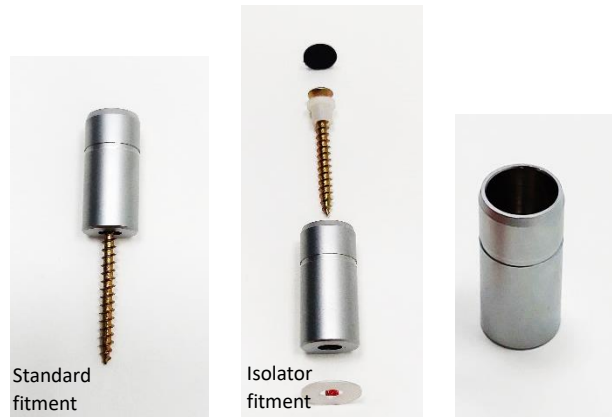

4.

Pull the cable tight next to the floor fitting. Mark the cable level with the top of the sleeve and cut to length taking care not to fray the cable ends

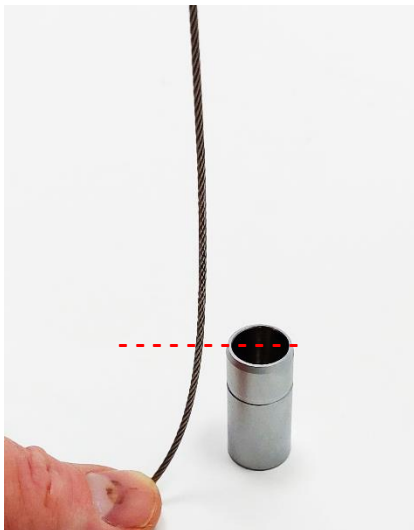

5.

Thread the upper sleeve, spring, washer and brass cable clamp on the cut end of the cables. Tighten the cable clamp grub screws and screw the upper sleeve into the lower to tension the cable



6.

Fit the power connector to the bare ends of the extender lead and tighten the small grub screws. Separate the 2 strands of the lead to suit the cable centres.



Note one strand of the lead is ribbed denoting +ve



7.

Determine the best position for the transformer, attach the power connectors to both cables adjacent to the ceiling or floor fittings as required. Attach the ribbed / +ve strand to the right hand cable. Remove the grub screws, slide over the cable, replace the screw and tighten.


Route the extender lead as required and connect to the transformer and

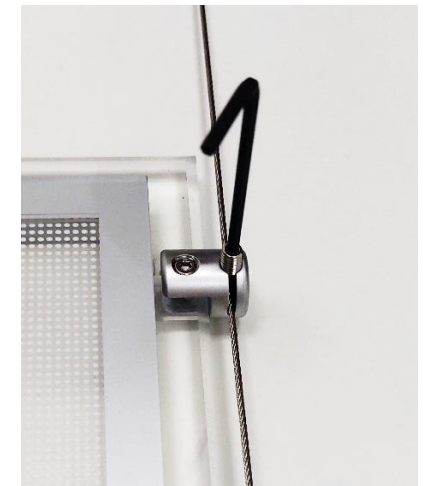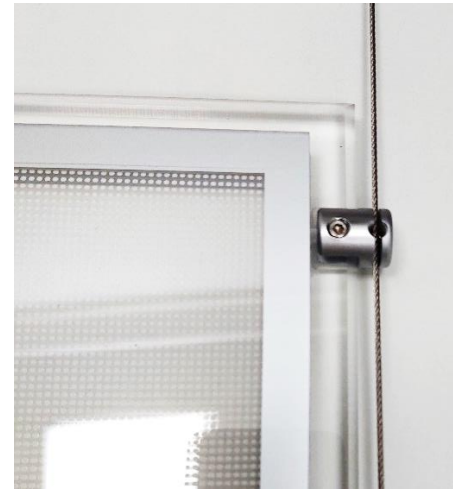

8.

Attach the illuminated pockets to the cables with the grub screws facing away from the window. Remove the grub screws, slide over the cable, replace the screw and tighten with the pocket at the desired height. Ensure all 4 grub screws are tightened.

Turn on at mains and check all pockets illuminate

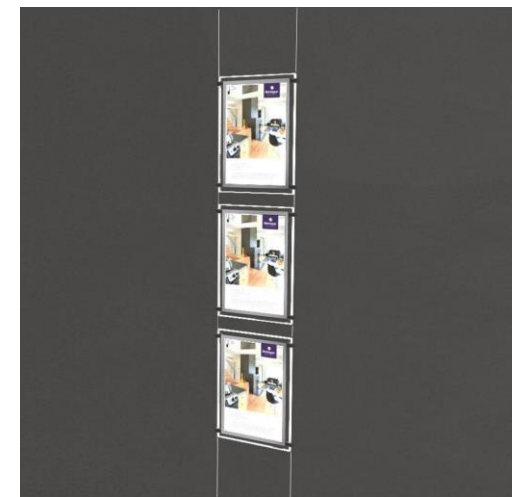

9.

Fit printed inserts to the light pockets on both faces by gently flexing open the top edge